


Schöck Isokorb® T type S


T
type S

Steel – steel


Installation instructions

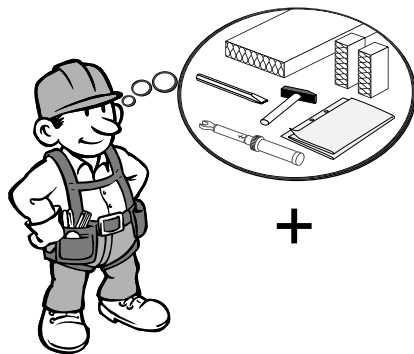








+

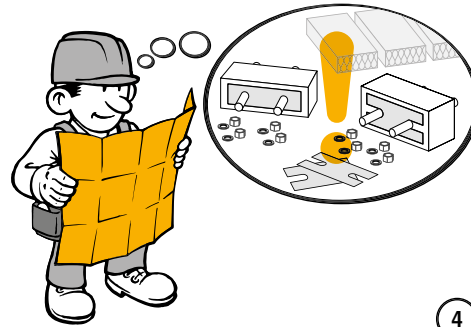

type S-N

 

type S-V

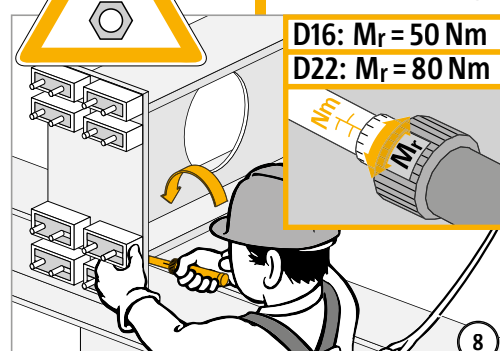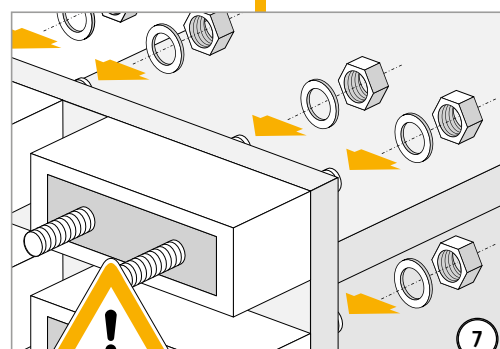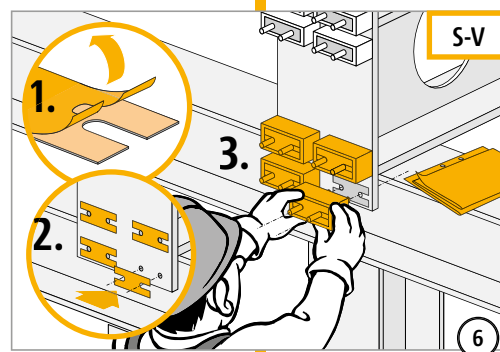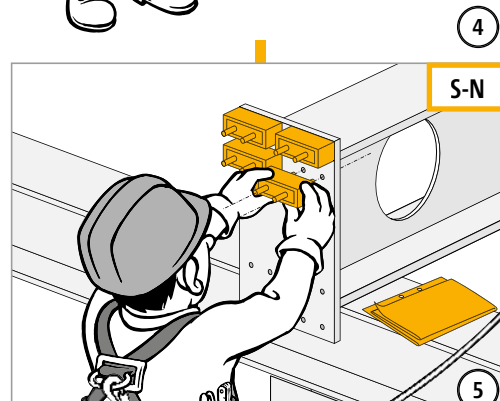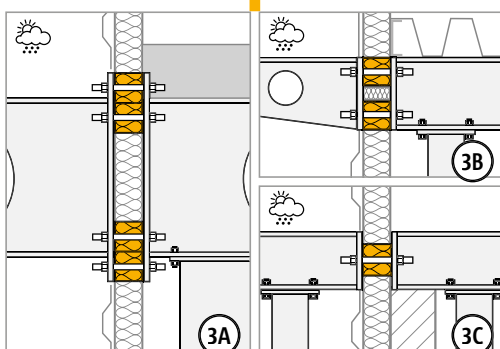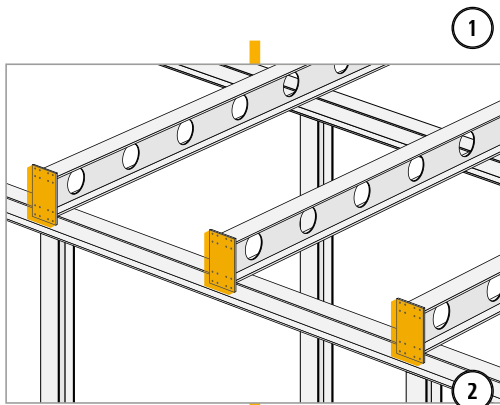 


D16: $M_r = 50 \text{ Nm}$
D22: $M_r = 80 \text{ Nm}$

T
type S

Steel – steel

Installation instructions

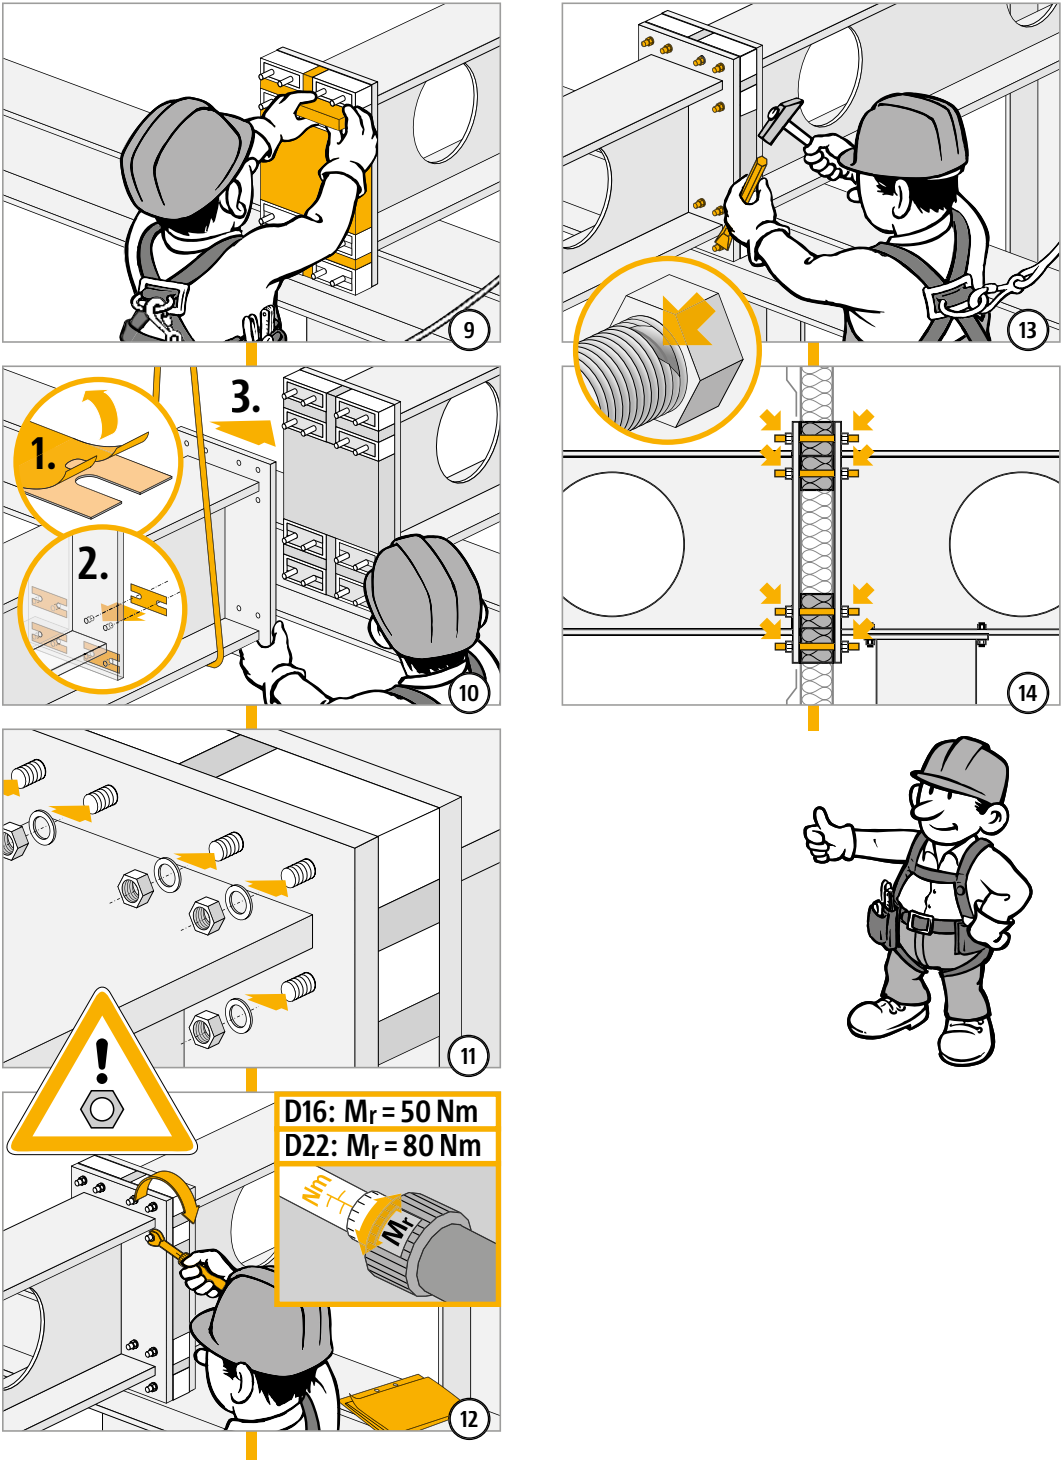

T
type S

Steel – steel