



# Installation Manual - Thermoanker for sandwich wall




TA-D  
TA-H

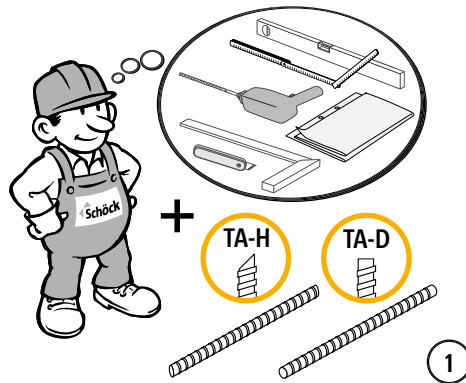

## TA-H

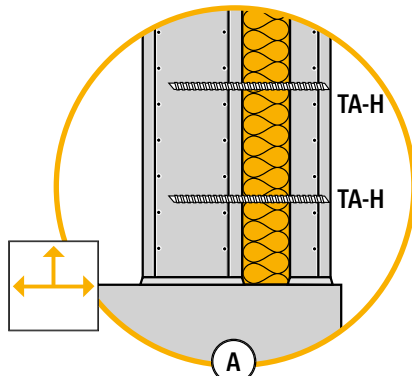


## TA-H + TA-D

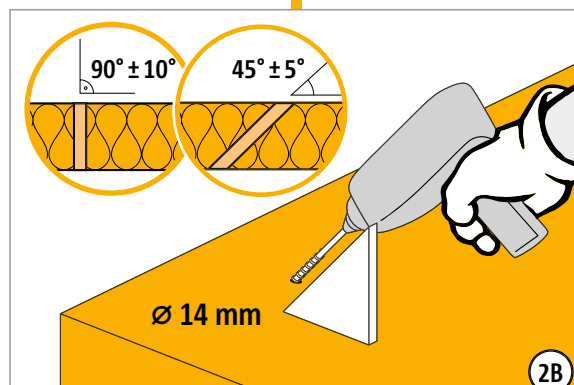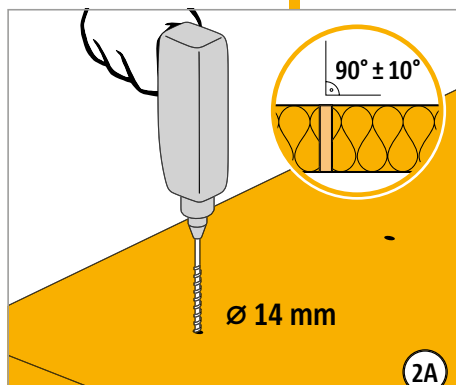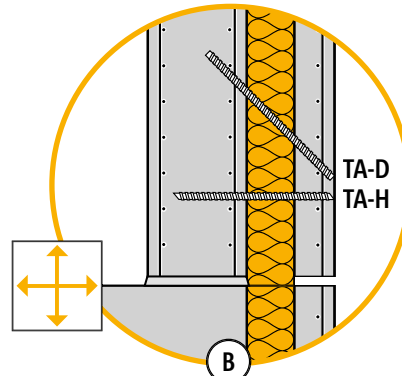


DIN EN 1992-1-1 + DIN EN 1992-1-1/NA + EN 206-1

3 + 4 + 5

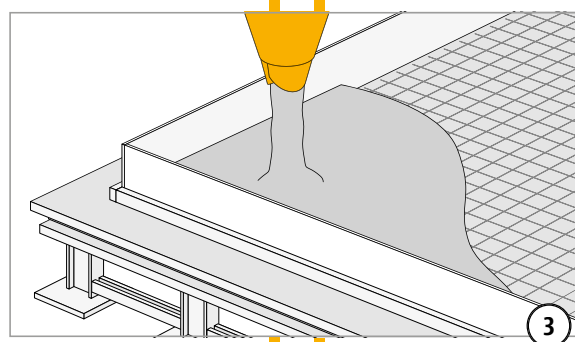

# Installation Manual - Thermoanker for sandwich wall

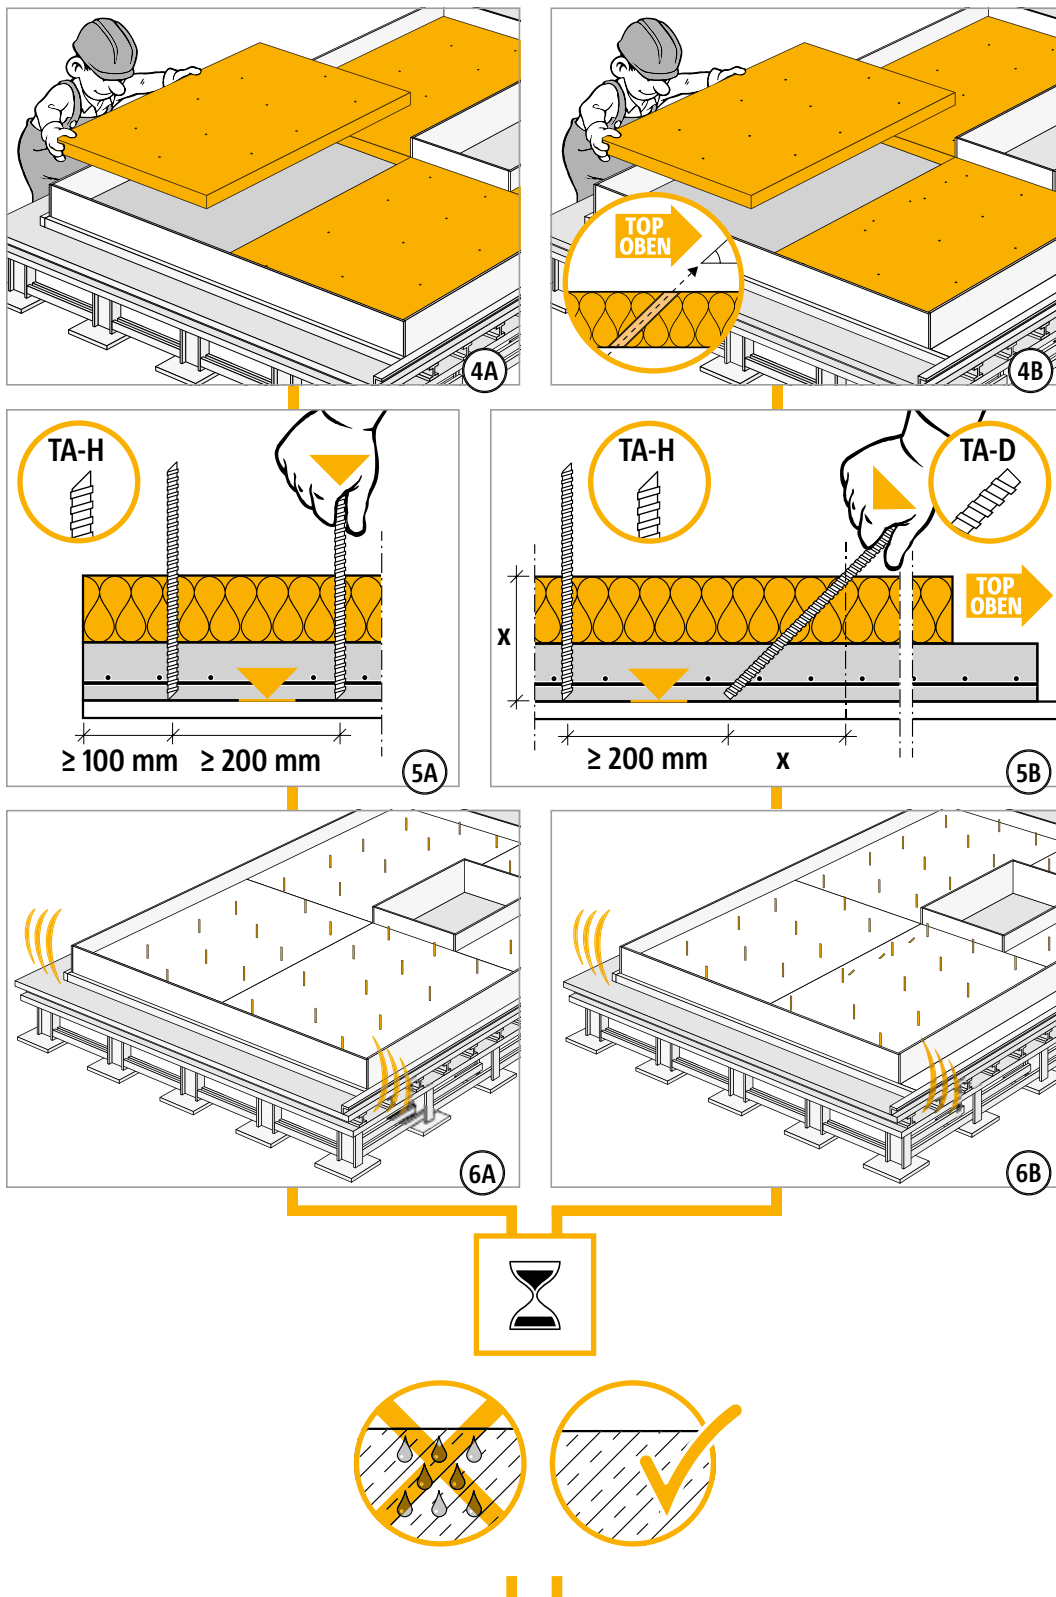

TA-D  
TA-H

# Installation Manual - Thermoanker for sandwich wall




TA-D  
TA-H

DIN EN 1992-1-1 + DIN EN 1992-1-1/NA + EN 206-1

7 + 8

max. 1h

!

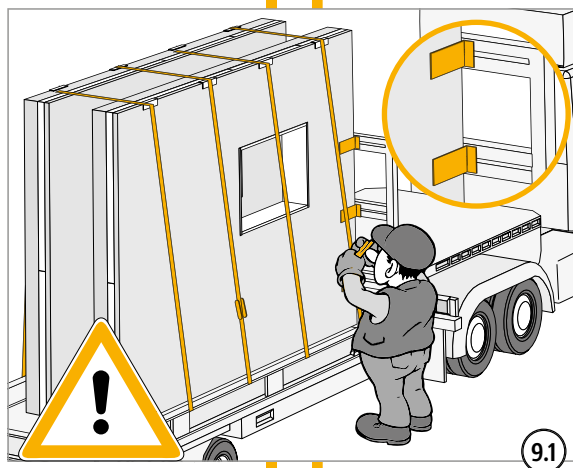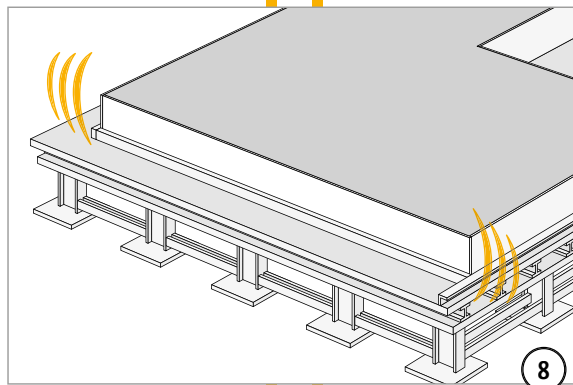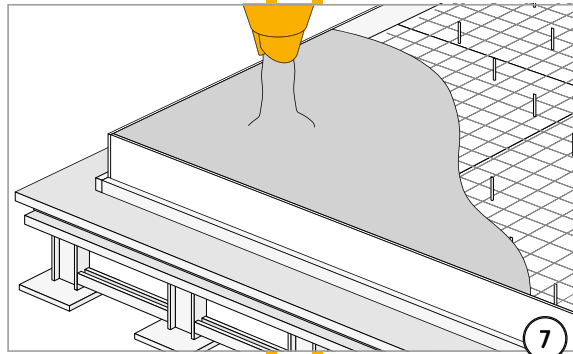

# Installation Manual - Thermoanker for sandwich wall

TA-D  
TA-H

